

FIG. 1

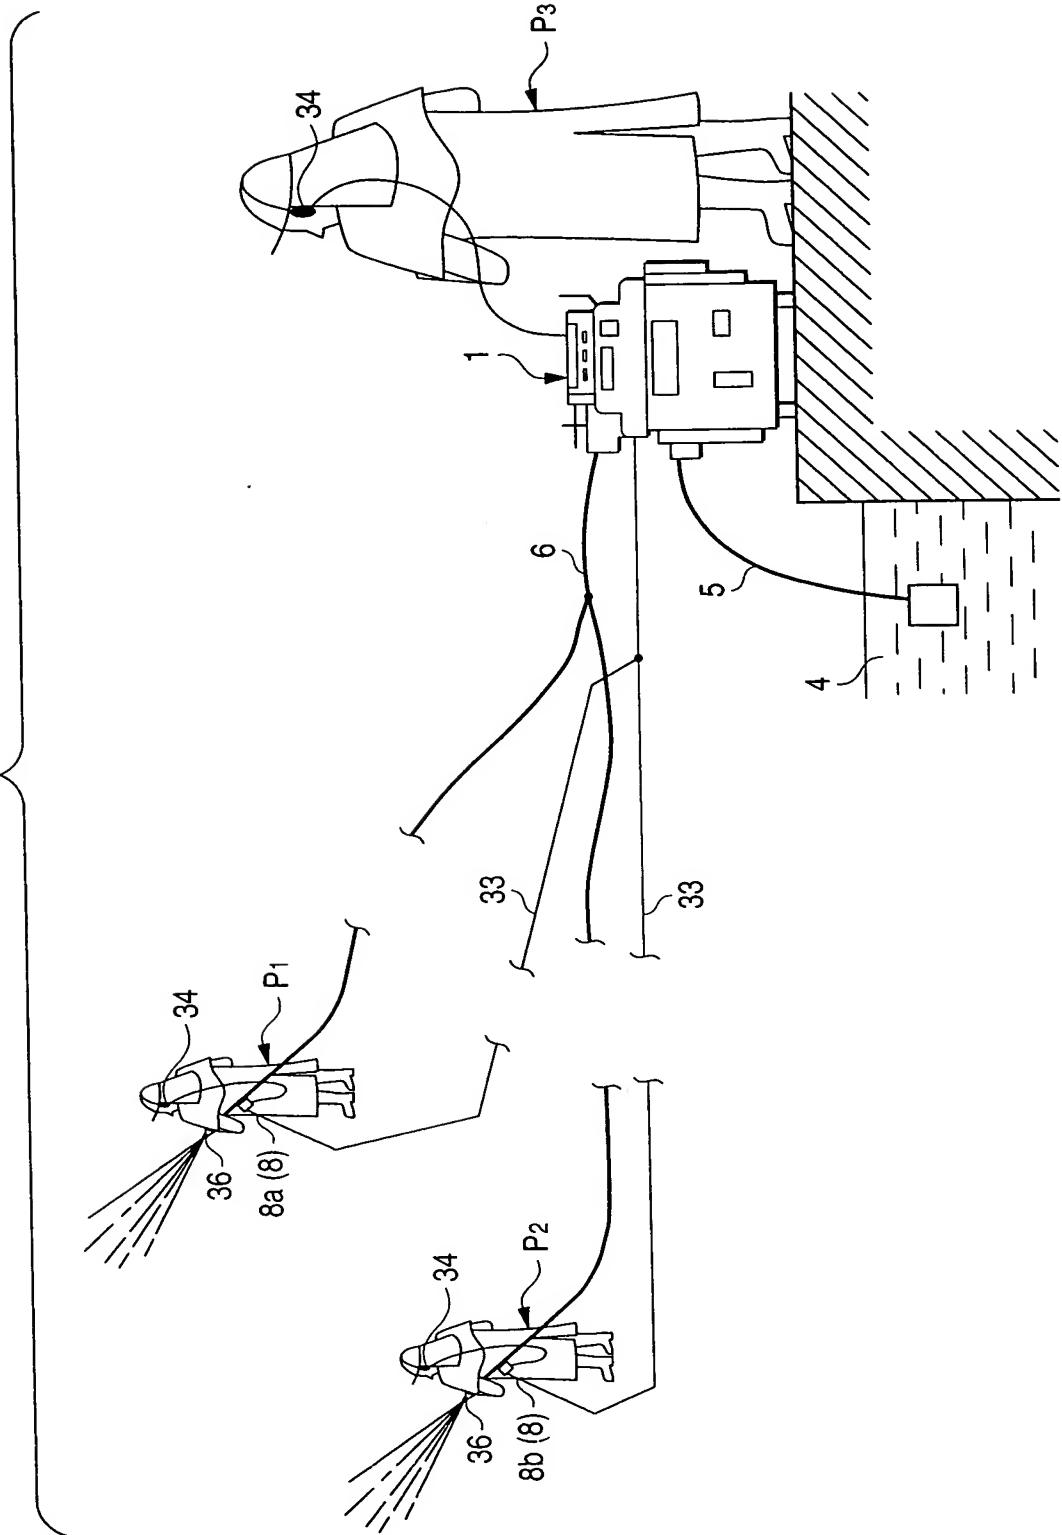


FIG. 2

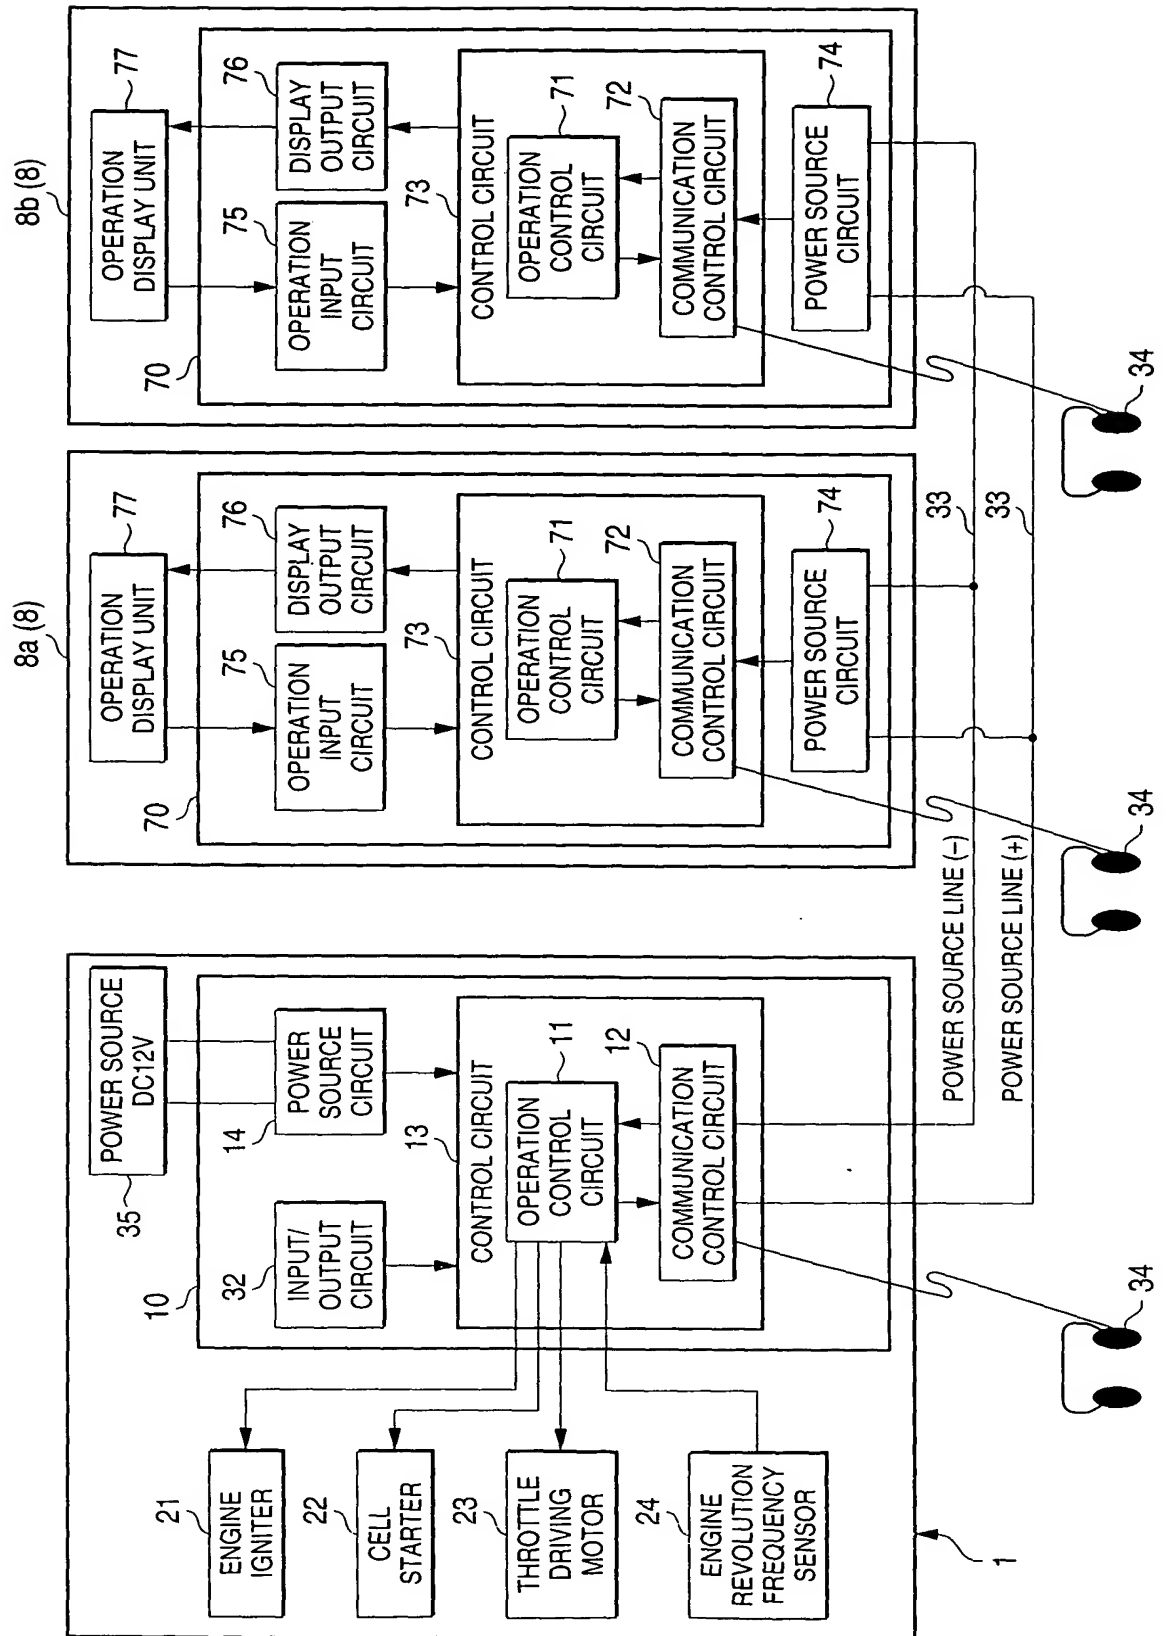


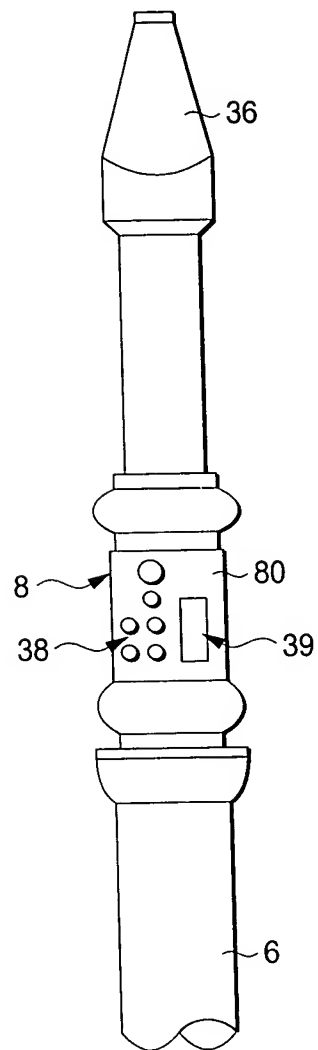
FIG. 3

FIG. 4

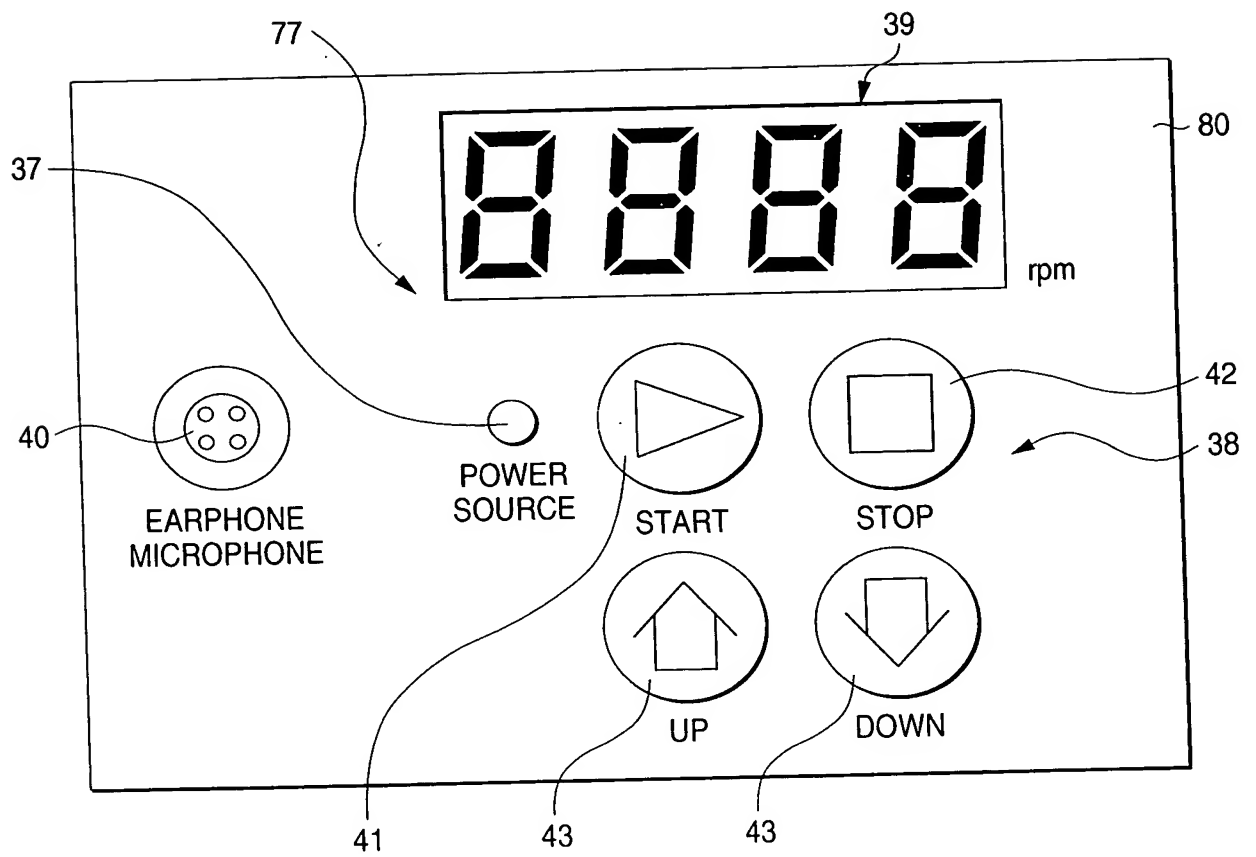


FIG. 5

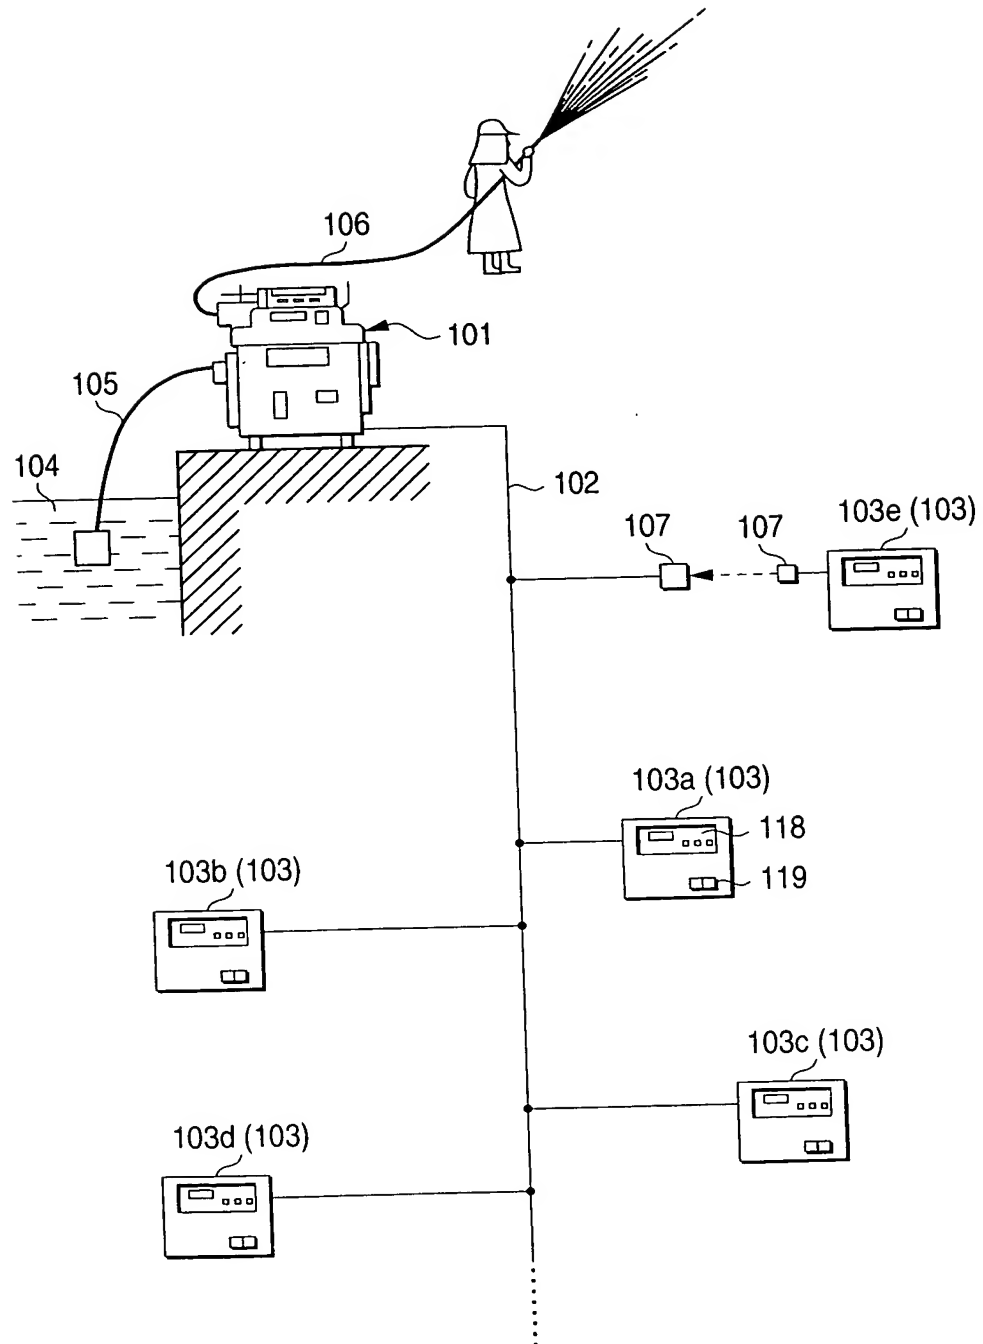
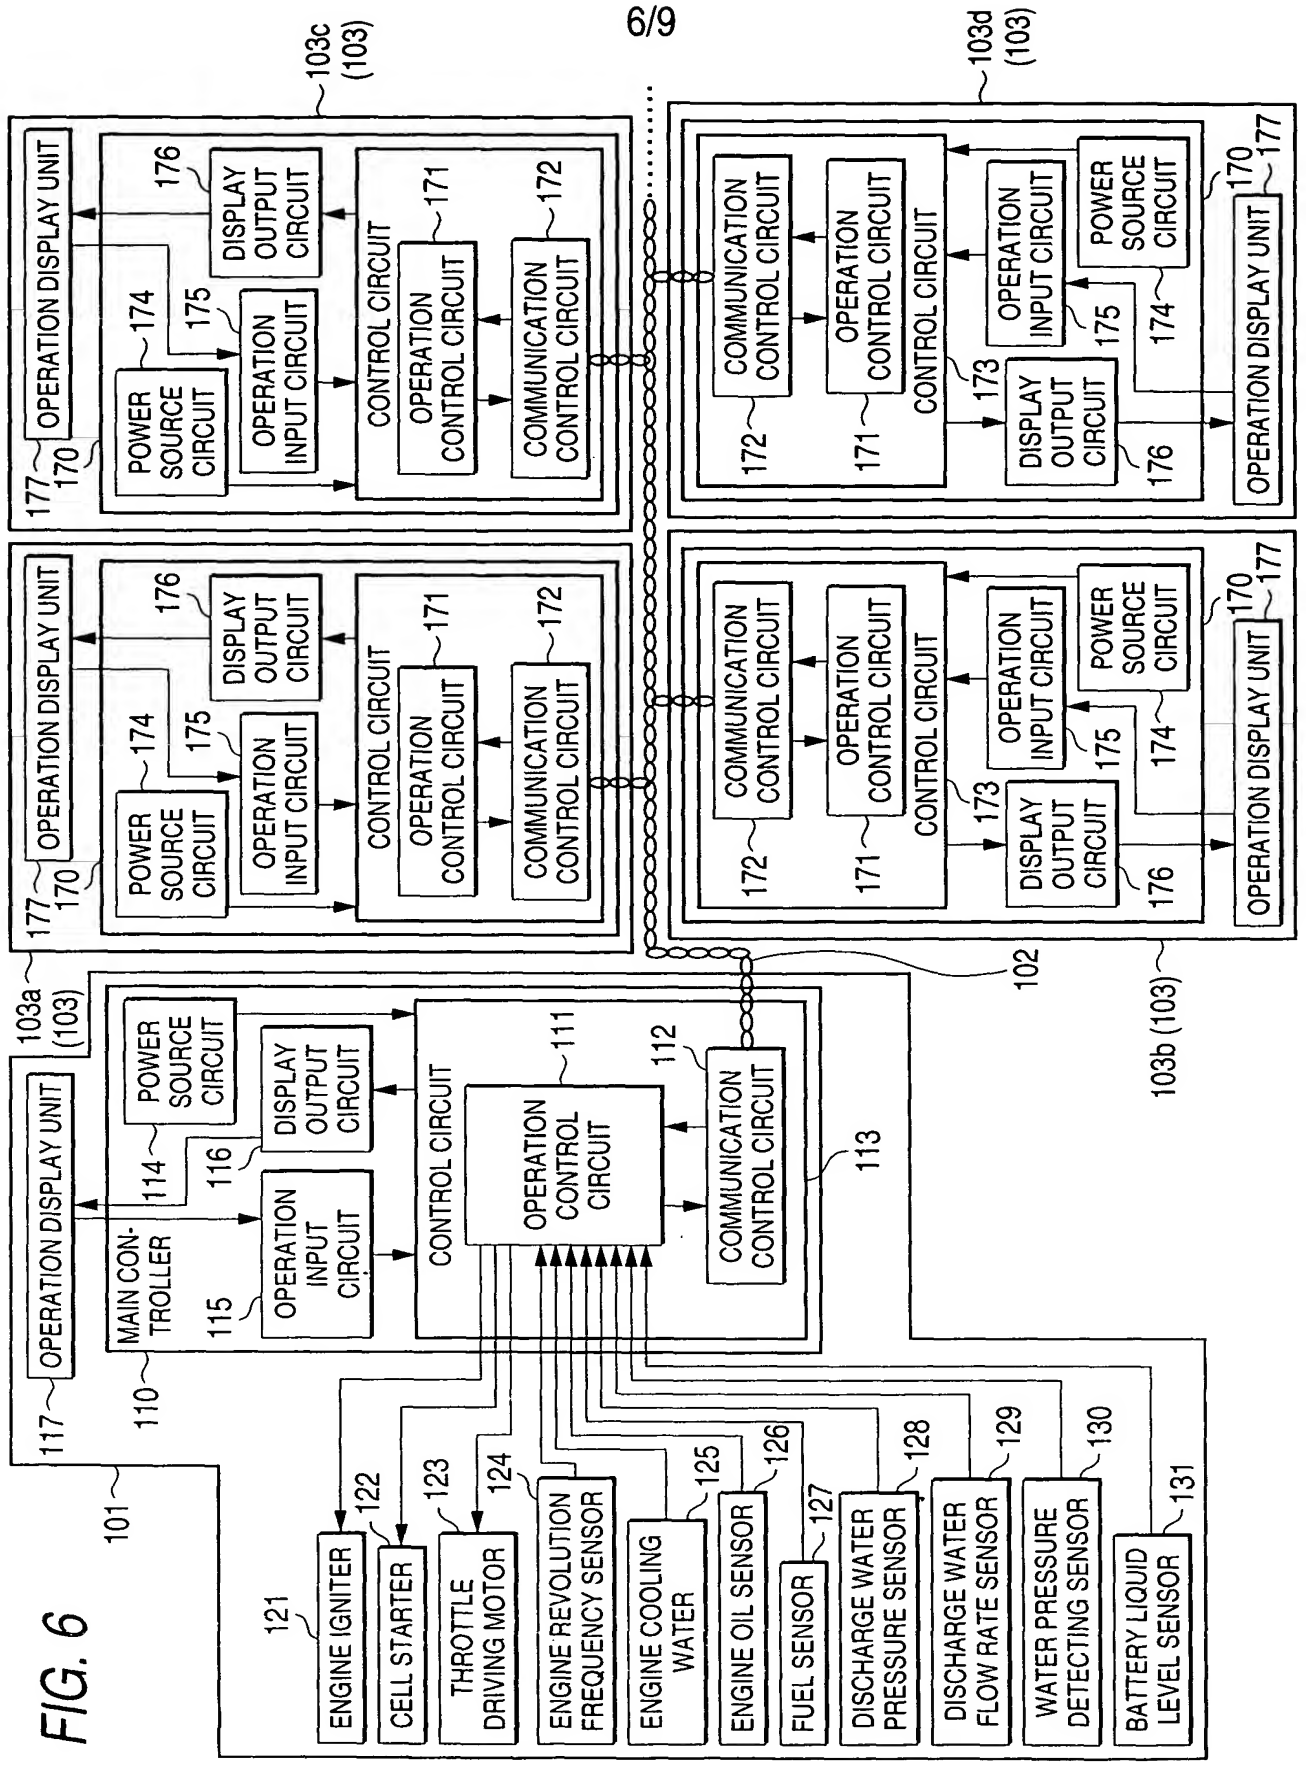


FIG. 6



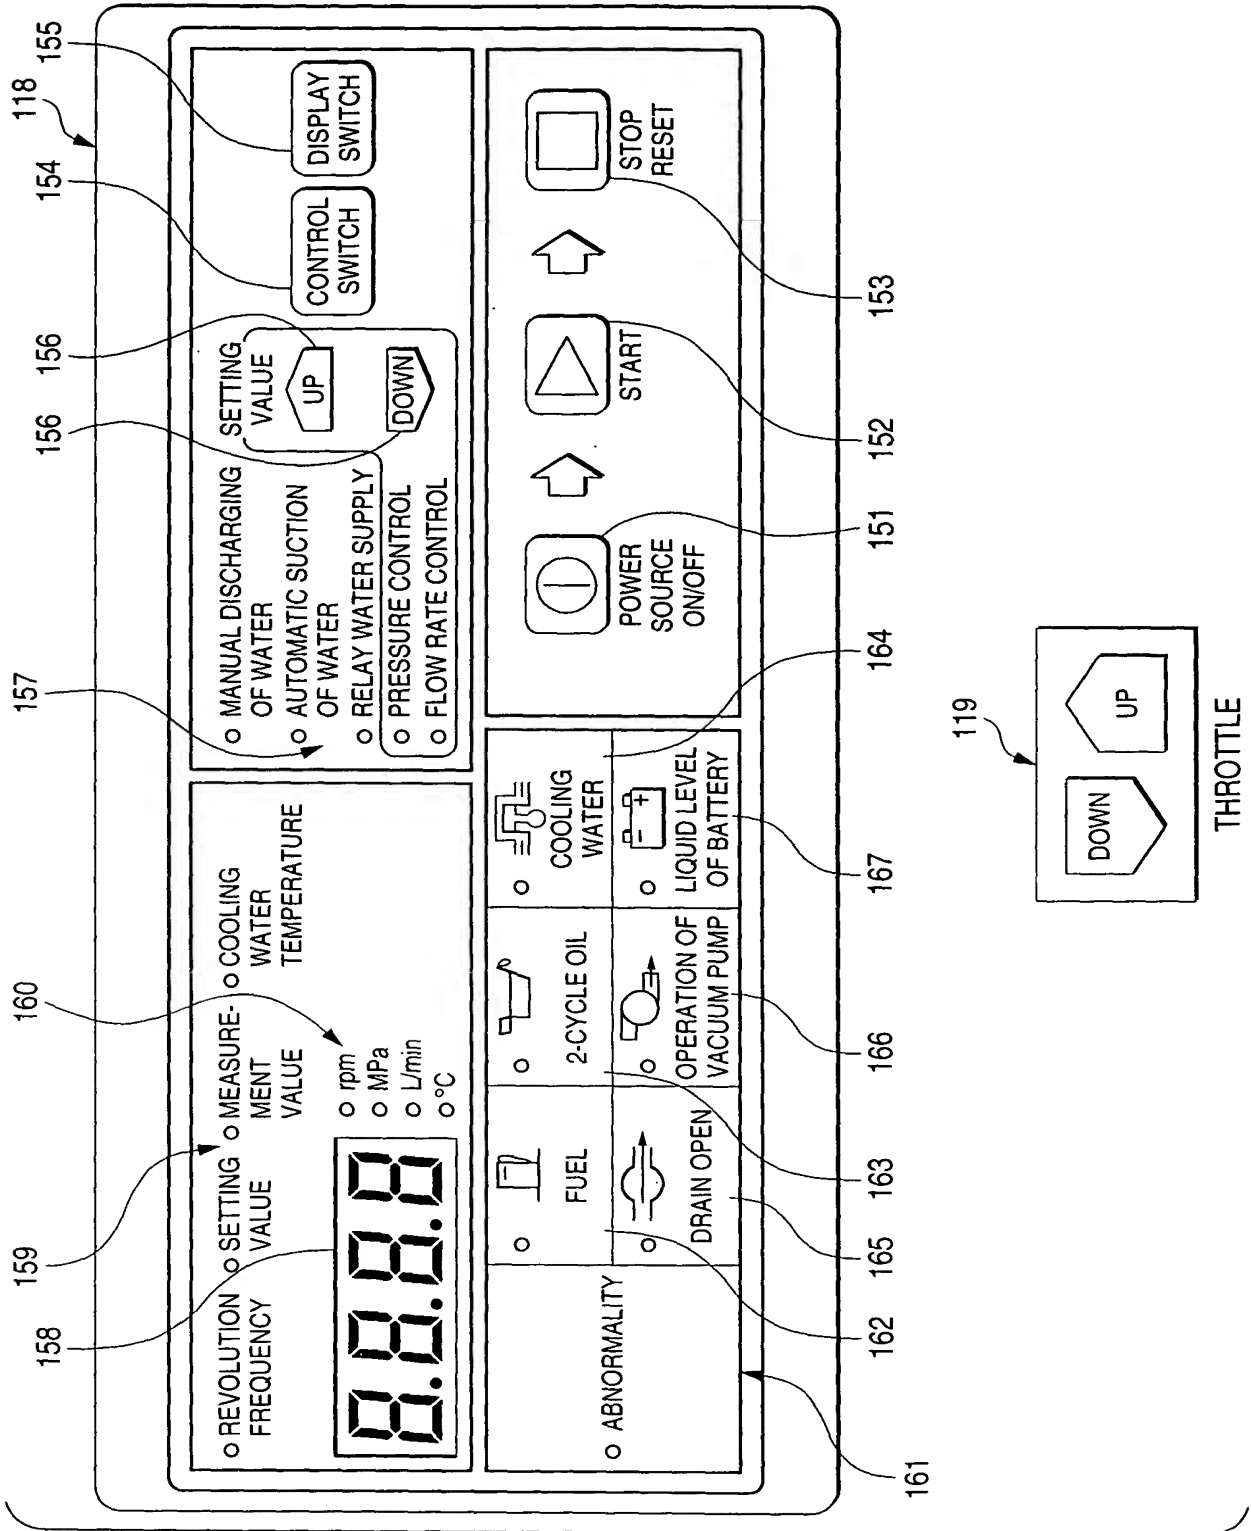


FIG. 7

FIG. 8

| ERROR CODE | ABNORMALITY INFORMATION |
|------------|------------------------------------------------|
| Err. 1 | ABNORMALITY OF DISCHARGE WATER PRESSURE SENSOR |
| Err. 2 | ABNORMALITY OF FLOW RATE SENSOR |
| Err. 3 | ABNORMALITY OF SUCTION WATER PRESSURE SENSOR |
| Err. 4 | ABNORMALITY OF START-UP |
| Err. 5 | ABNORMALITY OF SUCTION/DISCHARGE WATER |
| Err. 6 | ABNORMALITY OF ENGINE STOP |
| Err. 7 | OTHER ABNORMALITY |

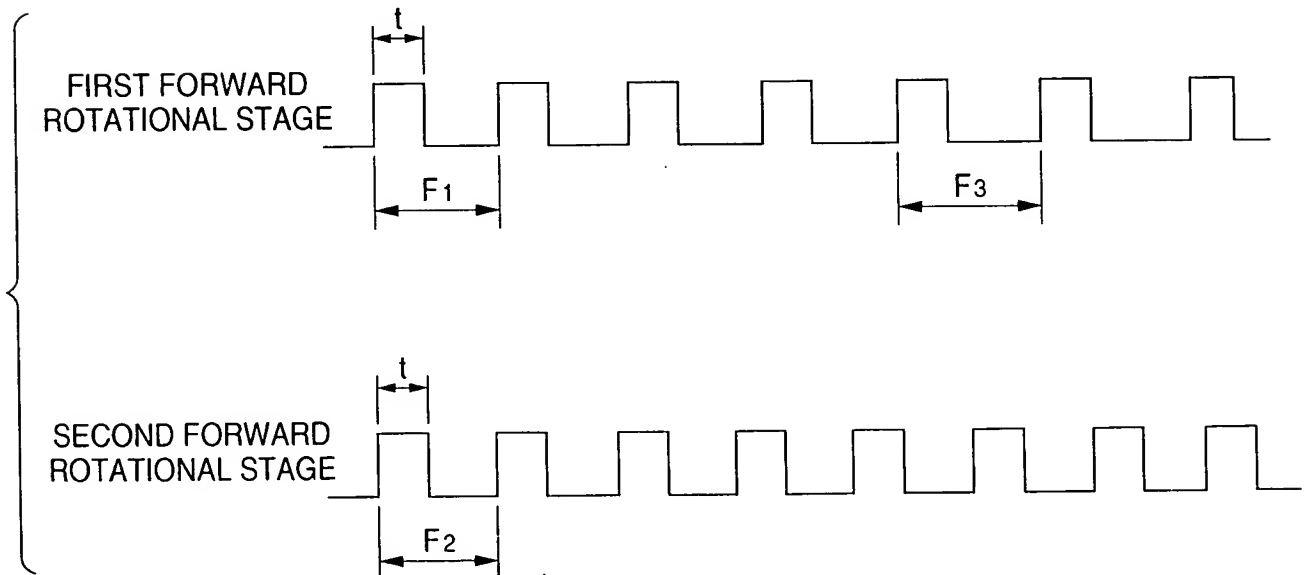
FIG. 9

FIG. 10

